

<b>CR5000AV Feedback</b>		
<b>Scenario</b>	<b>Top LED Light</b>	<b>Sound</b>
CR5000AV Default Settings: Primary age is set to 21. Secondary age is not set.		
If a valid ID is read and the patron's age is equal to or greater than the primary age.	Flashes green	Ascending three-beep tone
If a valid ID is read and the patron is under the primary age.	Flashes red	Long, low tone
If a valid ID is read and the patron is under the secondary age.	Flashes red	Long, low tone
If a valid ID is read, and the patron's age is greater than or equal to the secondary age, but less than the primary age.	Flashes yellow	Alternating beeps
Expired ID is read.	Flashes red	Long, low tone
Invalid ID is read.	Flashes yellow	Alternating beeps

To set a CR5000AV primary and secondary age, visit <http://www.codecorp.com/ConfigGuide/?product=CR5000>, and select *View the CR5000AV Configurator*.