

Code Reader 1.1 with RS-232 Interface

- 1 Plug the 120 Volt AC adapter into the wall socket.
- 2 **DO NOT** plug in large end of Code Reader 1.1 (only used for keyboard ports).
- 3 Plug the small end of the serial port adapter into the 120 AC Volt adapter.
- 4 Plug the serial port connection to the serial port in the back of your computer.
- 5 Plug the large end of the serial port adapter into the Code Reader 1.1 PS2 plug.

Note: Your Code Reader has been properly configured before shipping. If you wish to change the configuration, please download a version of the user's manual at: <http://www.codecorp.com/support/downloads.htm>

