

Handle Assembly Instructions – H2, BH1 or BH2



Figure 1

H2 / reader / cable assembly parts (as shown in Figure 1) include:

- Left: H2 Handle
- Left Middle: Reader (no battery blank)
- Middle: 2 short and 2 long hex screws
- Right Middle: Cable Clip
- Right: Cable



Figure 2
Hex Tool needed for assembly; not included in product shipment



Figure 3
Removing Reader from Handle

H2 Assembly Instructions

Note: Regardless of the handle / reader / cable configuration you ordered, this instruction card has been included in your shipment as a reference.

Step 1: Begin assembly by inserting the cable's 8-pin DIN connector into the bottom of the reader handle as shown.

Step 2: Slide the cable clip onto the cable.

Step 3: Attach clip to handle with two long screws. You will need to use a hex tool (see Figure 2) not included with shipment.



Step 1



Step 2



Step 3

Step 4: Connect the reader to the handle by first pulling back the flexible connector.

Step 5: Attach reader to connector as shown.

Step 6: Snap reader to handle.



Step 4



Step 5



Step 6

Step 7: Secure reader to handle with short screws. Assembly is complete.



Step 7



Assembled H2 / reader / cable

Removing Reader from Handle: First remove the two screws (if used) from the underside of the handle. Next, release the battery compartment clip as shown (Figure 3), then remove reader from handle.

BH1/BH2 Assembly Instructions

Step 1: Begin assembly by inserting the tab at the back of the BH1 or BH2 handle into the reader's battery compartment as shown.

Step 2: Push the reader forward snugly against the handle.

Step 3: Snap the reader to the handle. Assembly is complete.

Note: See Step 7 above to learn how to further secure the reader to the handle with the two screws included in shipment (optional). See 'Removing Reader from Handle' above for instructions to disassemble.



Step 1



Step 2



Step 3



Assembled
BH1 or BH2 / Reader

For further assistance in assembling a handle and reader configuration, please contact Code Technical Support: 801 495 2200 or via email at support@codecorp.com



Figure 4

BH1/BH2 / reader assembly parts (as shown in Figure 4) include:

- Left: BH1 or BH2 Handle
- Middle: Reader
- Right: 2 short hex screws