

How to Manually Enter Data

1. Begin at the **Ready** prompt. (Figure 17)
2. Select **Options**. (Figure 17)
3. Select **Enter data**. (Figure 18)
4. You can enter numbers, text, or symbols. Press the SHIFT key to toggle between entry modes. (Figure 19) Press a key multiple times to cycle through the available letters in the text entry mode just like a cell phone. Press the 0 key multiple times to cycle through all the available symbols. (Figure 20)
5. When done entering data, press the Enter key send the data. (Figure 21)



Figure 17.



Figure 18.

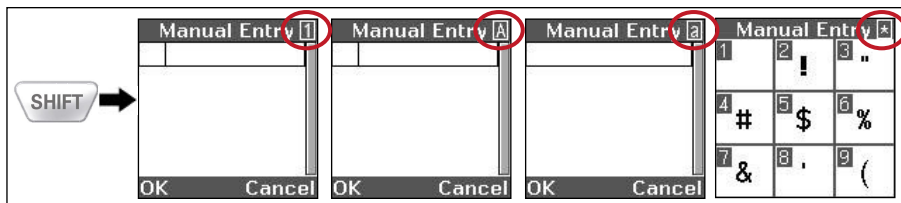


Figure 19.



Figure 20



Figure 21

How to Lock/Unlock the Keypad

To stop keys from accidentally being pressed, you can lock the keypad.

1. Press the SHIFT key and the up arrow key at the same time.



Unlock the keypad so you can use the keys again.

1. Press the SHIFT key and the up arrow key at the same time.



CodeViewer User Manual

More information and instructions are available in the CodeViewer User Manual, which can be downloaded from Code's website. Please visit www.codecorp.com/support to get the latest version.

CodeViewer™



How to Turn the CR3 On

Battery

- Insert a battery (Figure 1)

- Press and hold one of the red scan buttons for one second

Cable

- Attach a USB, PS/2, or RS232 cable to CR3 and a computer



Figure 1.

Press Here to Turn On and Scan



How to Scan Codes

1. Make sure the CR3 screen is at the Ready prompt. (Figure 3)
2. Hold the CR3 a few inches away from a code. (Figure 2)
3. Press one of the red scan buttons or the trigger on the optional handle. (Figure 2)
4. The CR3 will display data from the scanned code on its screen. (Figure 4)

Note: By default, data is sent to the host computer if the CR3 is connected to it; data is stored in the CR3's memory if it can't be immediately sent to the host computer. See the CodeViewer User Manual for more information on storing and sending data.



Figure 2.

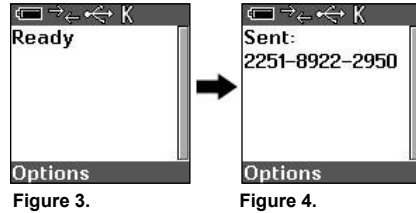


Figure 3.

Figure 4.

How to View Stored Data

Scanned data will be stored on the CR3 if it is not connected to a host computer or if it is set to store scanned data. Use these steps to view data stored on the CR3.

1. Select **Options** from the Ready screen by pressing the soft key below the word **Options**. (Figure 5 and 6)
2. Select **View storage**. (Figure 7)
3. First stored data item is displayed. (Figure 8)
4. Use the right and left arrow keys to cycle through the stored data items. (Figure 9)

Shortcut: From the Ready screen, simply press the right and left arrow buttons to cycle through the stored data items.

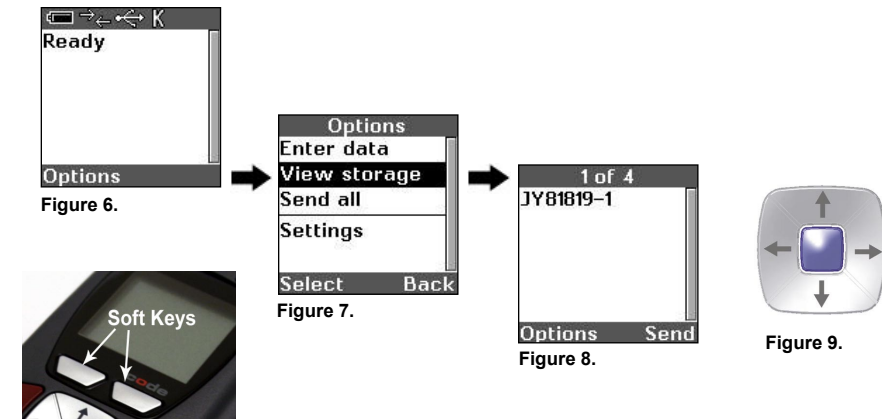


Figure 6.

Figure 7.

Figure 8.

Figure 9.

Figure 5.

How to Delete Stored Data

1. Begin at the **Ready** prompt. (Figure 10)
2. Select **Options**. (Figure 10)
3. Select **View storage**. (Figure 11)
4. Use the left and right arrow keys to display the item you want to delete. Select **Options**. (Figure 12)
5. Select **Delete**. (Figure 13)

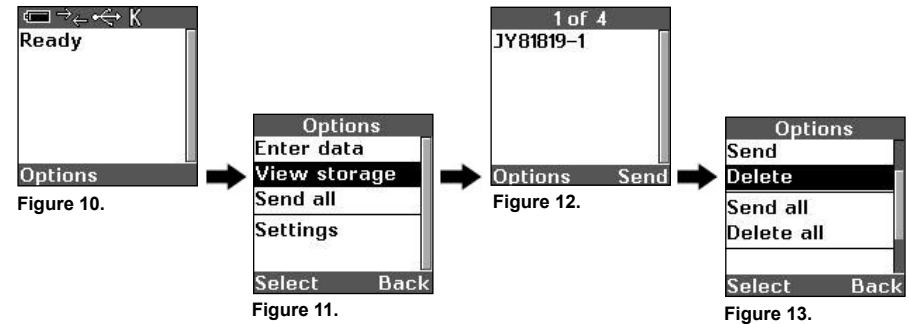


Figure 10.

Figure 11.

Figure 12.

Figure 13.

How to Transfer Stored Data to a Host Computer

1. Make sure the CR3 is attached to a host computer by cable or by a wireless Bluetooth connection.
2. The CR3 screen should be at the **Ready** prompt. Press the CLEAR button to return to the **Ready** prompt if necessary. (Figure 14)
3. Select **Options**. (Figure 14)
4. Select **Send all** to transfer all stored data to the host computer. (Figure 15)
5. The CR3 will display a message that all data was sent. (Figure 16)

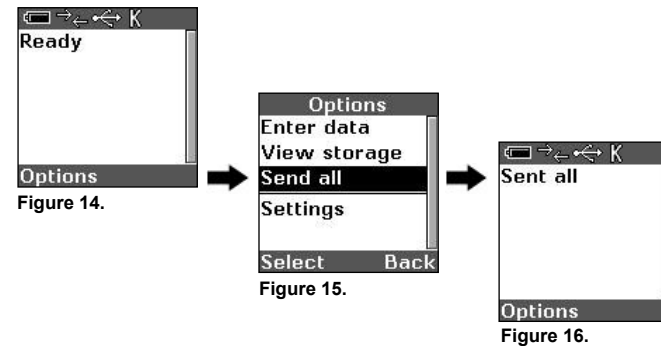


Figure 14.

Figure 15.

Figure 16.